


BRIGGS & STRATTON SERVICE RECOMMENDATIONS

GENUINE PARTS DELIVER GENUINE SERVICE

To ensure you are getting the best performance and productivity from your engine and equipment, always specify original equipment manufacturers service parts.

This is the only way you can be sure you are getting the most value for your money.

OIL SELECTION GUIDE

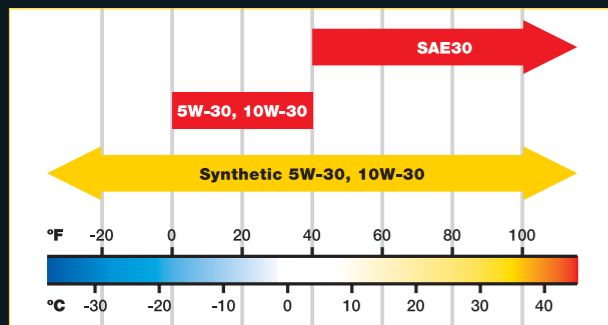

TASK	SERVICE TYPE	8 HOURS	25 HOURS	50 HOURS	100 HOURS	100 - 400 HOURS
Check Oil Level	0					
Service Air Cleaner Pre-Cleaner	1					
Change Oil**	2					
Inspect Spark Arrester (if equipped)	2					
Change Oil Filter (if equipped)	3					
Service Air Cleaner Cartridge*	3					
Clean Oil Cooler (if equipped)*	3					
Clean Cooling System*	3					
Check Valve Clearance on LPG/NG Engines	3					
Clean/Replace Spark Plugs	4					
Clean/Replace In-line Fuel Filter (if equipped)	4					
Check Valve Clearance	4					

* Clean more often under dusty conditions or when airborne debris is present. Replace air cleaner, if very dirty.

** Change oil after first 5 to 8 hours of use, then every 50 hours. Change oil every 25 hours when operating the engine under heavy load or in high temperatures. V-Twin engine oil change every 100 hours. 3/LC change oil every 200 hours.